


## HEAD PARTS AND PARTS NAME

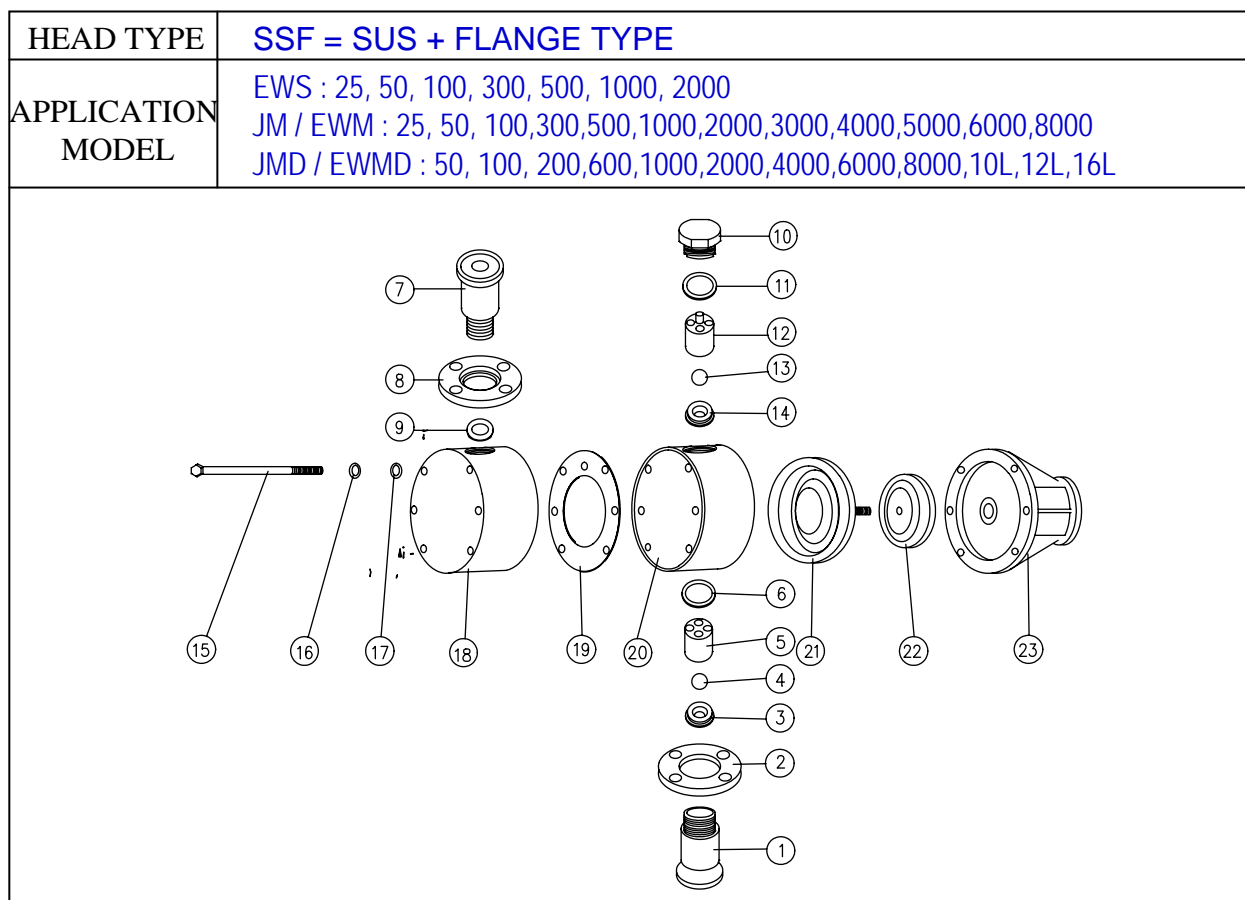

- ※ 1. The numbers are indicated the order of disassembly, that will help your assembly.
- 2. DO NOT DISASSEMBLE NO.23 P.FLANGE.

No.	DRAWING NO.	PART NAME	Q'TY	REMARK
1		SUC.CONNECTOR	1	
2		FLANGE	1	
3		GASKET	1	
4		BALL SEAT	1	
5		CHECK BALL	1	
6		SUC.BALL GUIDE	1	
7		DIS.CONNECTOR	1	
8		FLANGE	1	
9		GASKET	1	
10		HEAD CAP	1	
11		GASKET	1	
12		D.BALL GUIDE	1	
13		CHECK BALL	1	
14		BALL SEAT	1	

No.	DRAWING NO.	PART NAME	Q'TY	REMARK
15		HEX. BOLT	4/6	
16		SPRING WASHER	4/6	
17		PLANE WASHER	4/6	
18		HEAD CHAMBER	1	
19		GASKET	1	
20		PUMP HEAD	1	
21		DIAPHRAGM	1	
22		PUSH PLATE	1	
23		PUMP FLANGE	1	