

HEAD PARTS AND PARTS NAME

HEAD TYPE	TCH = PTFE + HOSE TYPE
APPLICATION MODEL	EWS : 25, 50, 100, 300, 500, 1000, 2000 JM / EWM : 25, 50, 100, 300, 500, 1000, 2000, 3000, 4000, 5000, 6000, 8000, 10L JMD / EWMD : 50, 100, 200, 600, 1000, 2000, 4000, 6000, 8000, 10L, 12L, 16L, 20L

- ※ 1. The numbers are indicated the order of disassembly, that will help your assembly.
2. DO NOT DISASSEMBLE NO.25 P.FLANGE.

No.	DRAWING NO.	PART NAME	Q'TY	REMARK
1		UNION NUT	1	
2		S.H.CONNECTOR	1	
3		BALL SEAT	1	
4		CHECK BALL	1	
5		S.BALL GUIDE	1	
6		GASKET	1	
7		UNION NUT	1	
8		D.H.CONNECTOR	1	
9		GASKET	1	
10		HEAD CAP	1	
11		GASKET	1	
12		D.BALL GUIDE	1	
13		CHECK BALL	1	
14		BALL SEAT	1	

No.	DRAWING NO.	PART NAME	Q'TY	REMARK
15		HEX. BOLT	4/6	
16		SPRING WASHER	4/6	
17		PLANE WASHER	4/6	
18		REINFORCE PL.	1	
19		HEAD COVER	1	
20		O-RING	1	
21		O-RING	1	
22		PUMP HEAD	1	
23		DIAPHRAGM	1	
24		PUSH PLATE	1	
25		PUMP FLANGE	1	