


HEAD PARTS AND PARTS NAME

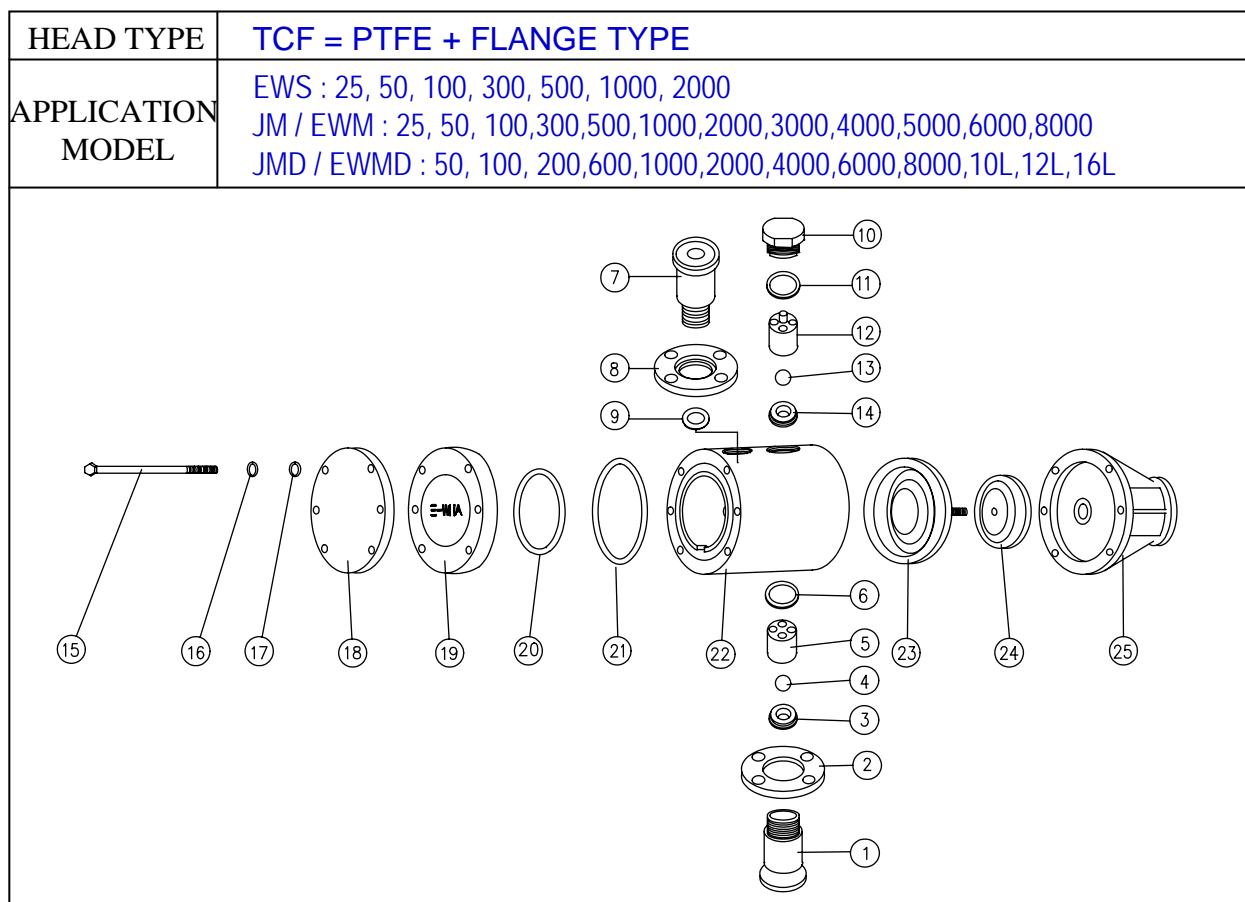

- ※ 1. The numbers are indicated the order of disassembly, that will help your assembly.
- 2. DO NOT DISASSEMBLE NO.25 P.FLANGE.

No.	DRAWING NO.	PART NAME	Q'TY	REMARK
1		SUC.CONNECTOR	1	
2		FLANGE	1	
3		BALL SEAT	1	
4		CHECK BALL	1	
5		S.BALL GUIDE	1	
6		GASKET	1	
7		DIS.CONNECTOR	1	
8		FLANGE	1	
9		GASKET	1	
10		HEAD CAP	1	
11		GASKET	1	
12		D.BALL GUIDE	1	
13		CHECK BALL	1	
14		BALL SEAT	1	

No.	DRAWING NO.	PART NAME	Q'TY	REMARK
15		HEX. BOLT	4/6	
16		SPRING WASHER	4/6	
17		PLANE WASHER	4/6	
18		REINFORCE PL.	1	
19		HEAD COVER	1	
20		O-RING	1	
21		O-RING	1	
22		PUMP HEAD	1	
23		DIAPHRAGM	1	
24		PUSH PLATE	1	
25		PUMP FLANGE	1	