HEAD PARTS AND PARTS NAME

HEAD TYPE	TCH = PTFE + HOSE TYPE
APPLICATION MODEL	JL / EWL : 10L, 20L, 30L, 40L, 50L JLD / EWLD : 20L, 40L, 60L, 80L, 100L

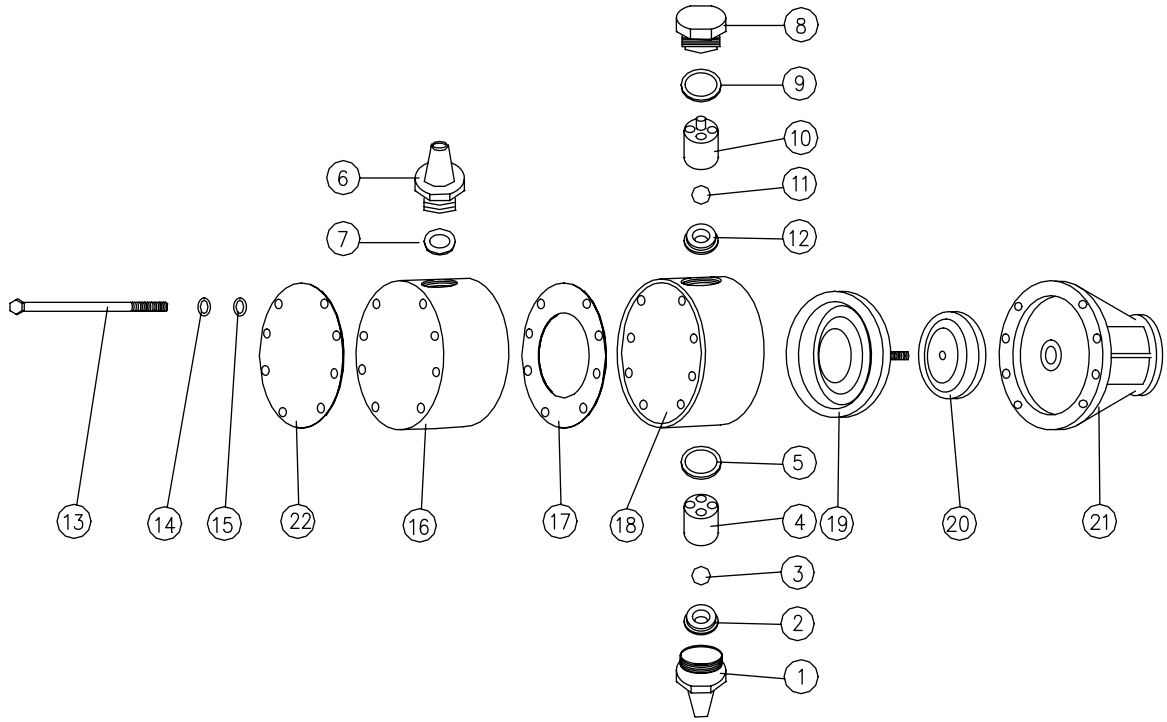

※ 1. The numbers are indicated the order of disassembly, that will help your assembly.

2. DO NOT DISASSEMBLE NO.21 P.FLANGE.

No.	DRAWING NO.	PART NAME	Q'TY	REMARK
1		S.H.CONNECTOR	1	
2		BALL SEAT	1	
3		CHECK BALL	1	
4		S.BALL GUIDE	1	
5		GASKET	1	
6		D.H.CONNECTOR	1	
7		GASKET	1	
8		HEAD CAP	1	
9		GASKET	1	
10		D.BALL GUIDE	1	
11		CHECK BALL	1	
12		BALL SEAT	1	
13		HEX. BOLT	8	
14		SPRING WASHER	8	

No.	DRAWING NO	PART NAME	Q'TY	REMARK
15		PLANE WASHER	8	
16		HEAD CHAMBER	1	
17		GASKET	1	
18		PUMP HEAD	1	
19		DIAPHRAGM	1	
20		PUSH PLATE	1	
21		PUMP FLANGE	1	
22		REINFORCE PLATE	1	